



OPERATING INSTRUCTIONS FOR D SERIES CONTROL (D4 & D5)

D Series Control

Right Side

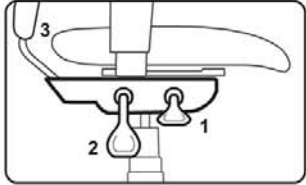

Left Side

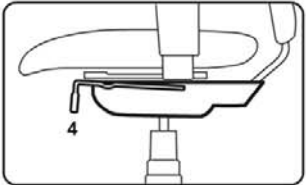

- 1-Seat Height Adjustment
- 2-Back Angle Adjustment
- 3-Back Height Adjustment
- 4-Seat Slider

Shown: D5




Shown: D4




D Series Control

Right Side

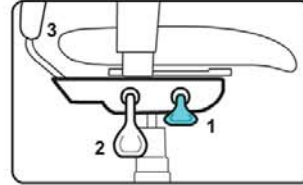


Left Side

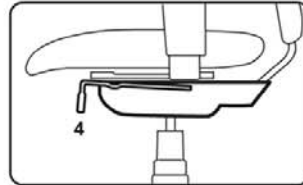


**Paddle (1):
Seat Height Adjustment**
To raise the seat height: Stand up (or raise your body; so there's no pressure on the seat), lift the paddle to raise the seat height.
To lower the seat height: Sit in the chair and lift the paddle to lower the seat height.

D Series Control

Right Side

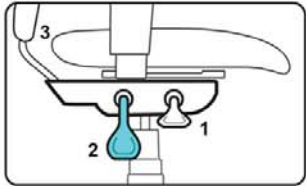


Left Side

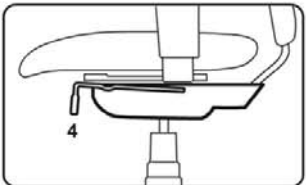


**Paddle (2):
Back Angle Adjustment**
To adjust : Lift the paddle to unlock (the paddle stays up while it's in unlocked position), lean back to adjust the angle of the back. Push the paddle down to lock back into position. It can be locked in any position along the angle of rotation.

D5 Control Only

Right Side

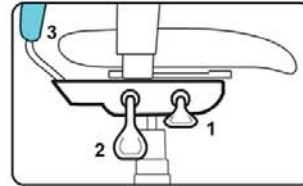

Left Side

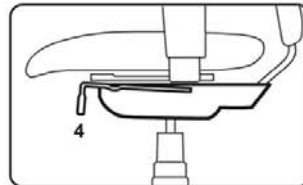


**D5 Control Only
Back Rest (3):
Back Height Adjustment**
To raise the back height: place your hands on the bottom of the back rest and gently push upward.
To lower the back height: Gently push the back rest upward until it reaches its max. The back rest will then fall to the lowest height level.

Note:
Back height adjustment not available on Bolero chairs.


OPERATING INSTRUCTIONS FOR D SERIES CONTROL (D4 & D5)

D4 Control Only

Right Side

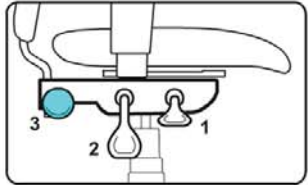

Left Side

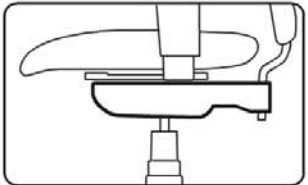

D4 Control Only


Back Rest (3):

Back Height Adjustment


To raise and lower the back height: Turn the knob counterclockwise to loosen, put back in desired position, then tighten knob by turn clockwise.

D5-SS2 Control Only

Right Side

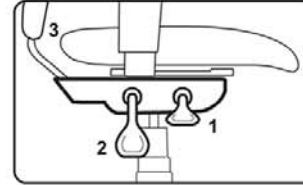

Left Side

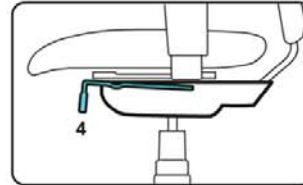

D5-SS2 Control Only

Paddle (4):

Seat Slider

To adjust, sit in the chair, lift the paddle and slide the seat forward or back to adjust seat depth. Release the paddle to lock in position.