




OPERATING INSTRUCTIONS FOR M SERIES CONTROL (M2 & M6)

M Series Control

Right Side

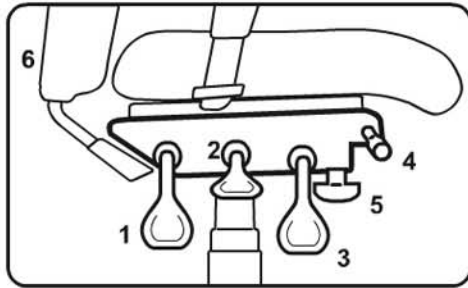

Left Side

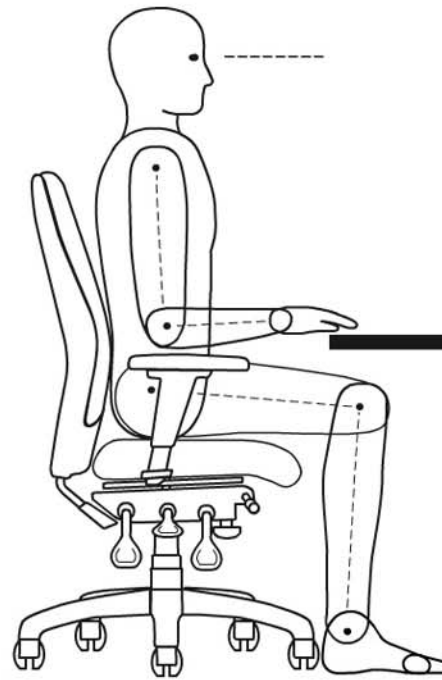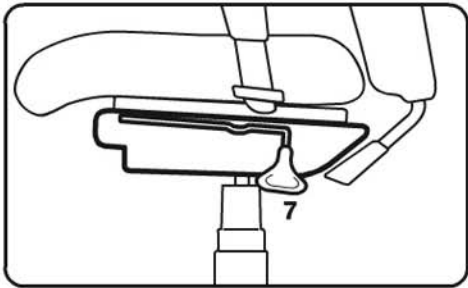


- 1-Back Angle Adjustment
- 2-Seat Height Adjustment
- 3-Seat Angle Adjustment
- 4-Forward Tilt Angle Adjustment
- 5-Tension Control
- 6-Back Height Adjustment
- 7-Seat Slider

Shown: M2





M Series Control

Right Side

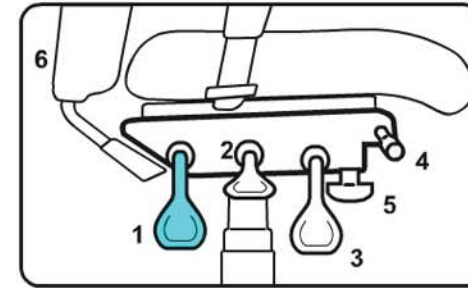


Left Side

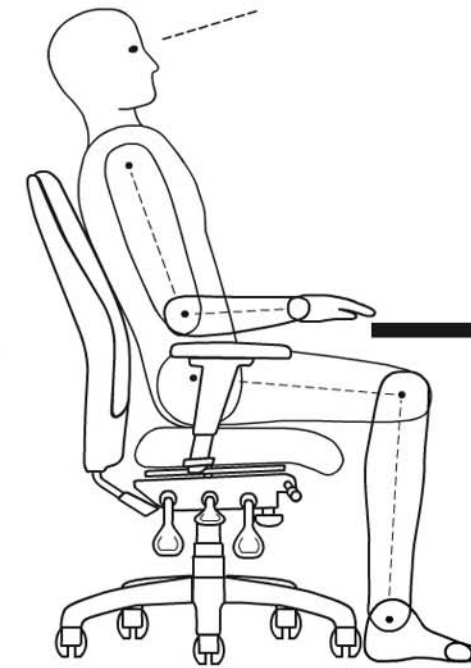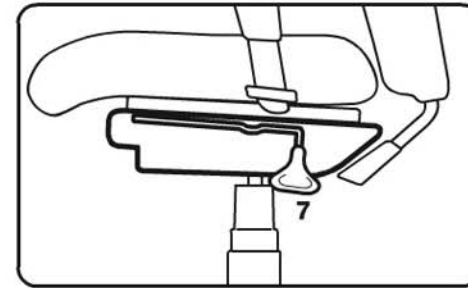



**Paddle (1):
Back Angle Adjustment**
To adjust: Lift the paddle to unlock (the paddle stays up while it's in unlocked position), adjust the back angle and push the paddle down to lock the back in position.

M Series Control

Right Side

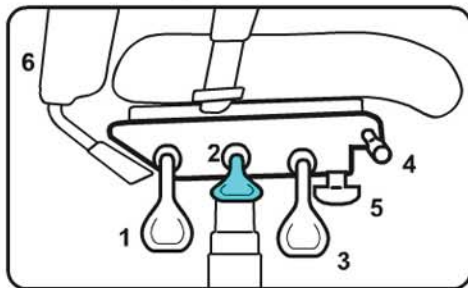


Left Side

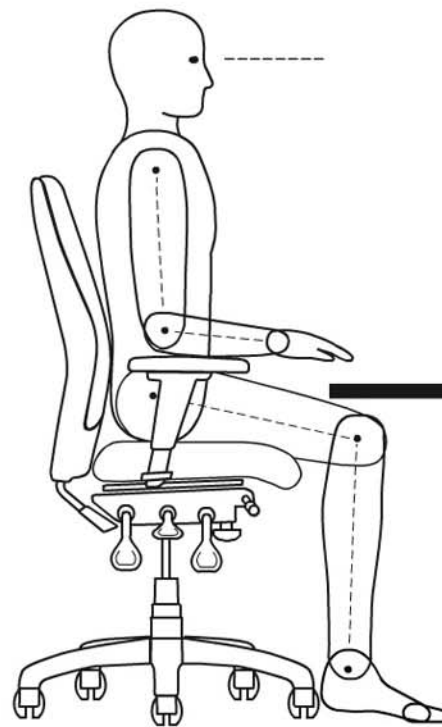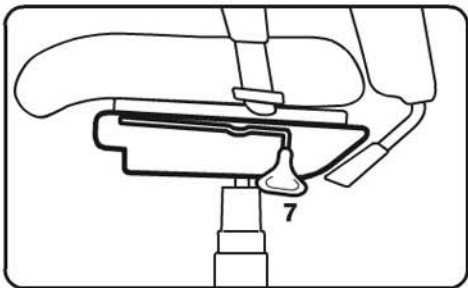



**Paddle (2):
Seat Height Adjustment**
To raise the seat height: Stand up (or raise your body so there's no pressure on the seat), lift the paddle to raise the seat height.
To lower the seat height: Sit on the chair and lift the paddle to lower the seat height.

M Series Control

Right Side

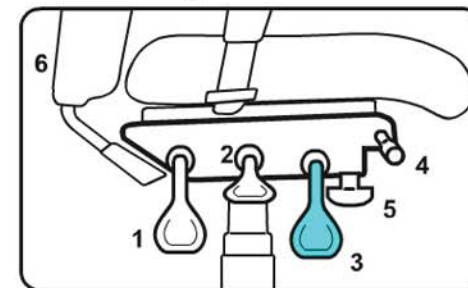

Left Side

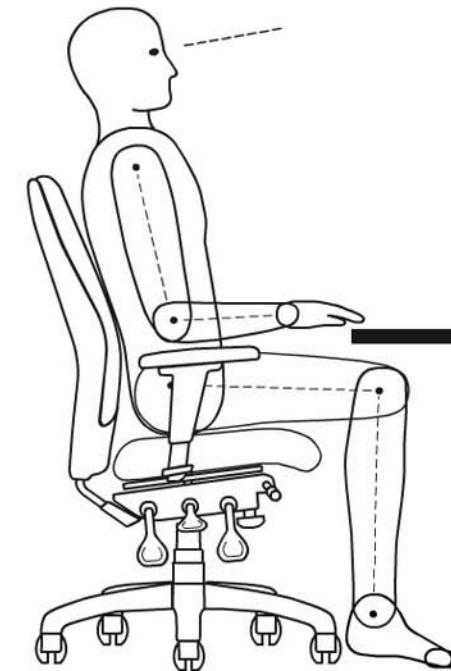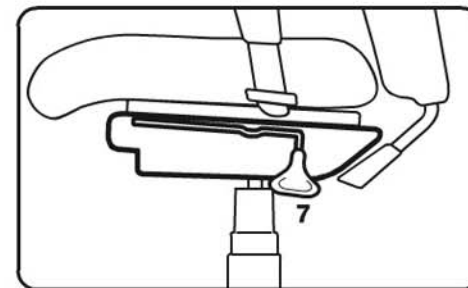


**Paddle (3):
Seat Angle Adjustment**
To adjust: Lift the paddle to unlock (the paddle stays up while it's in unlocked position), adjust the seat angle and push the paddle down to lock it back in position.



OPERATING INSTRUCTIONS FOR M SERIES CONTROL (M2 & M6)

M2 Control Only

Right Side

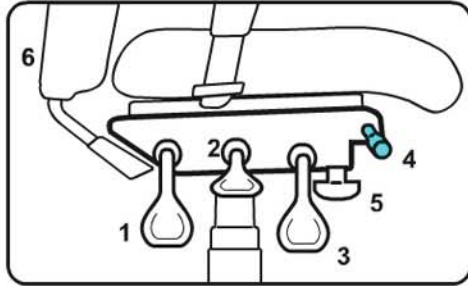

Left Side

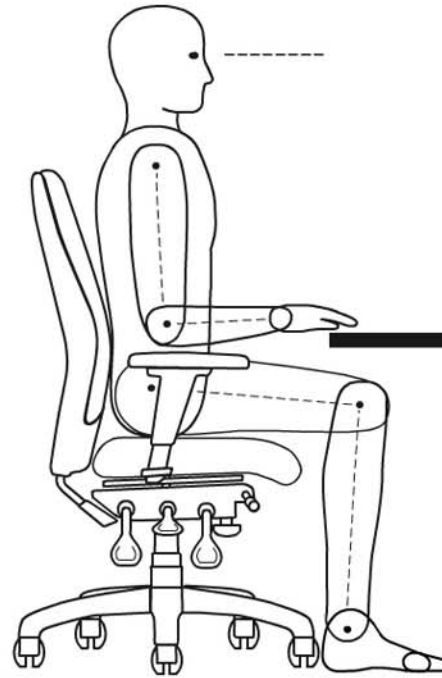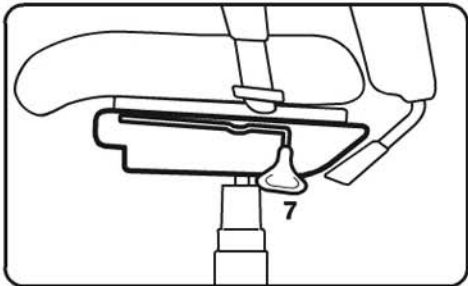

M2 Control Only Paddle (4):


Forward Tilt Angle Adjustment
To set the forward tilt angle, paddle 3 needs to be in unlock position, sit in the chair and lean back to take the weight off the forward tilt angle adjustment.

To adjust the seat forward: turn the lever toward the front of the seat (clockwise) until you reach desired seat tilt angle.



To adjust the seat to the level position: turn the lever toward the back of the seat (counterclockwise) until you reach the desired seat tilt angle.

M Series Control

Right Side

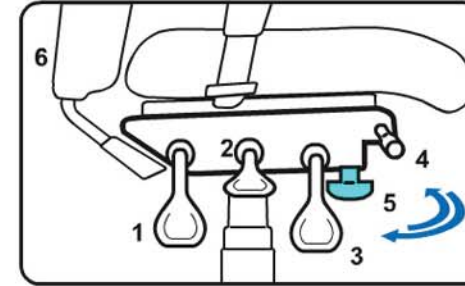

Left Side

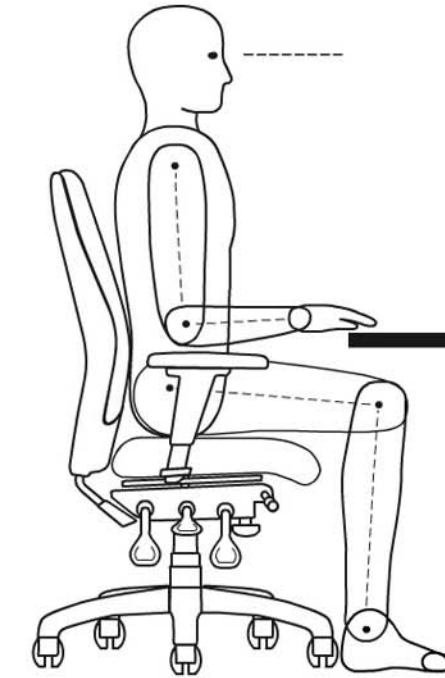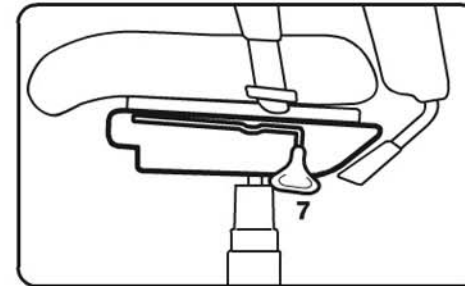


Knob (5): Tension Control



To adjust the tension, the user needs to adjust the seat in forward tilt position (see paddle 4) first.
To tighten the tension: when seated, turn the knob counterclockwise.
To loosen the tension: when seated, turn the knob clockwise.

M Series Control

Right Side

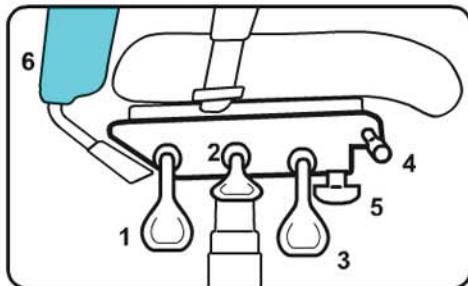

Left Side

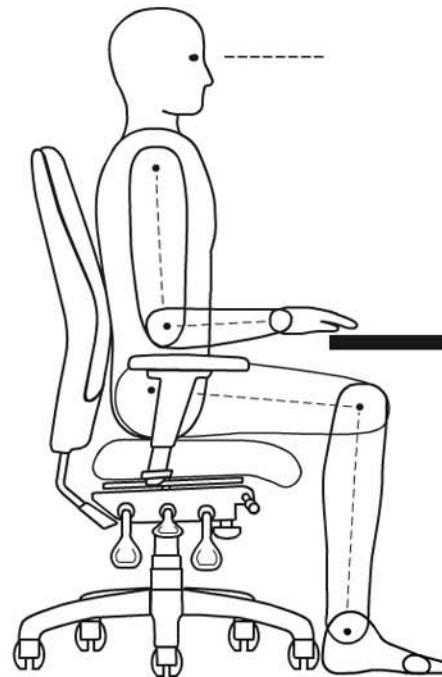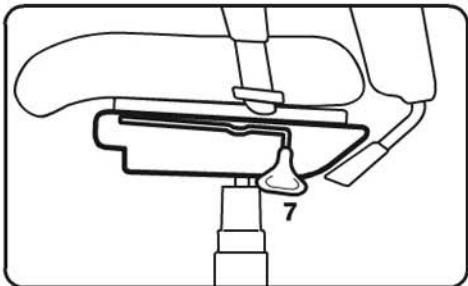


Back Rest (6):



Back Height Adjustment
To raise the back height: place your hands on the bottom of the back rest and gently push upward.
To lower the back height: Gently push the back rest upward until it reaches its max. The back rest will then fall to the lowest height level.

M2-SS2 Control Only

Left Side

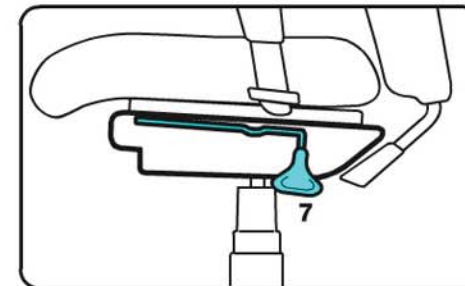

M6-SS2 Control Only

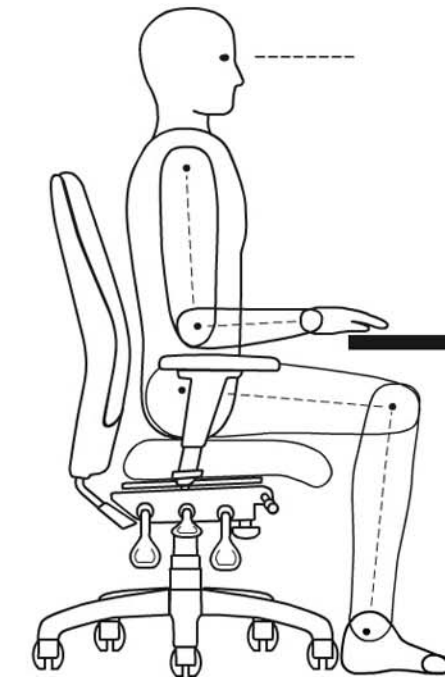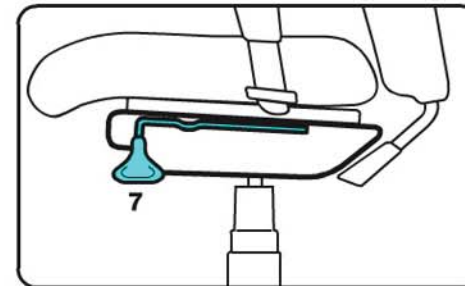

M2-SS2 & M6-SS2 Controls Only Paddle (7): Seat Slider

To adjust, sit in the chair, lift the paddle and slide the seat forward or back to adjust seat depth. Release the paddle to lock in position.