



OPERATING INSTRUCTIONS FOR S SERIES CONTROL (S1, S2, & S4)

S Series Control

Right Side

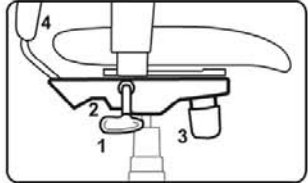

Left Side

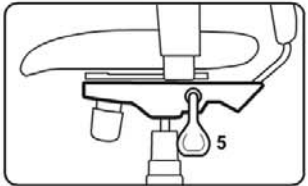


- 1-Seat Height Adjustment
- 2-Seat and Back Tilt
- 3-Tension Control
- 4-Back Height Adjustment
- 5-Back Angle Adjustment




S Series Control

Right Side

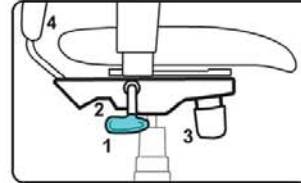


Left Side

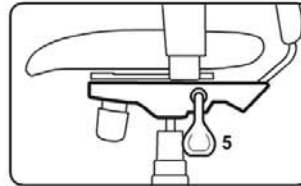


**Paddle (1):
Seat Height Adjustment**
To raise the seat height: Stand up (or raise your body; so there's no pressure on the seat), lift the paddle to raise the seat height.
To lower the seat height: Sit in the chair and lift the paddle to lower the seat height.

S Series Control

Right Side

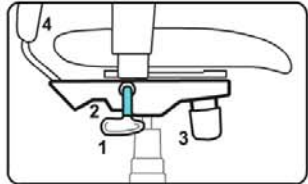


Left Side

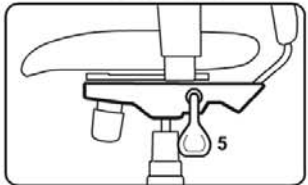


**Pull Rod (2):
Seat and Back Tilt**
To tilt: Pull the rod out to unlock (the rod stays out while it's in unlocked position). Push the rod in to lock in the upright position.

S Series Control

Right Side

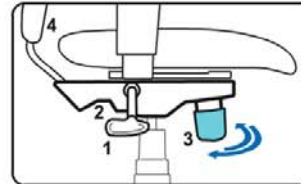

Left Side

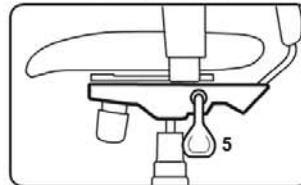


**Knob (3):
Tension Control**
To tighten the tension: when seated, turn the knob counterclockwise.
To loosen the tension: when seated, turn the knob clockwise.


OPERATING INSTRUCTIONS FOR S SERIES CONTROL (S1, S2, & S4)

S4 Control Only

Right Side

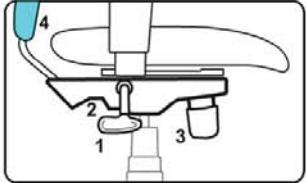

Left Side

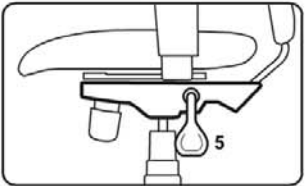

S4 Control Only Back Rest (4):


Back Height Adjustment

To raise the back height: place your hands on the bottom of the back rest and gently push upward.


To lower the back height: Gently push the back rest upward until it reaches its max. The back rest will then fall to the lowest height level.

S4 Control Only

Right Side

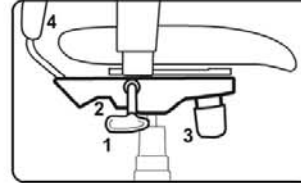

Left Side

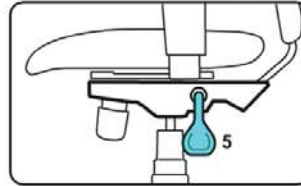

S4 Control Only Paddle (5):

Back Angle Adjustment

To adjust : Lift and hold the paddle to unlock, lean back to adjust the angle of the back. Release the paddle to lock back into position. It can be locked in any position along the angle of rotation.